

## LIFTING EYE ADAPTER INSTRUCTION

### PART NO. BG-01-151335

The Lifting Eye Adapter is used to enable clamping of nVent HOFFMAN enclosures with non-dismountable lifting eyes on the Steinhauer ModCenter machines.

Failure to follow these instructions may lead to damage or injury. Comply with local and national safety requirements when working in hazardous locations.





### BEFORE YOU START

- Always wear personal protection equipment while working with the item.
- Use hard hat, safety glasses, gloves and safety protection shoes at all times.
- The lifting eye adapter(s) should always be in a proper working condition. If parts are missing or broken the use of the lifting eye adapter(s) should be stopped immediately. (See unpack and check.)

### UNPACK AND CHECK

1. Set of two lifting eye adapters, each equipped with two magnets
2. This instruction sheet

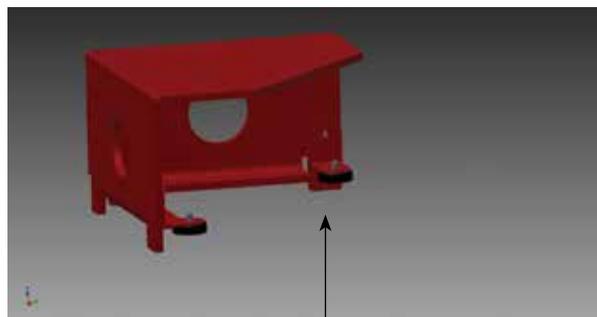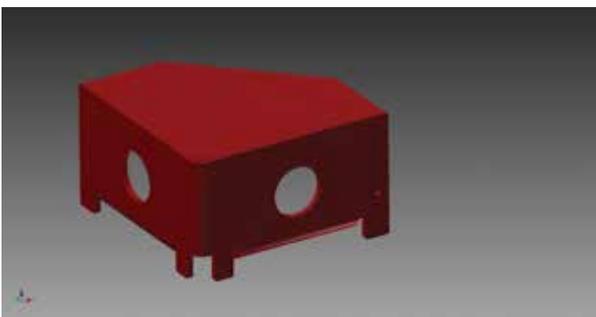

Lifting eye adapter with magnets

# MODCENTER LIFTING EYE ADAPTER INSTRUCTION


## OPERATION

---



1. Place the enclosure into the ModCenter without the lifting eye adapter(s) in place.



2. Position the lifting eye adapter(s) over the lifting eyes, located at the corners of the enclosure which need to be clamped by the clamping bar.

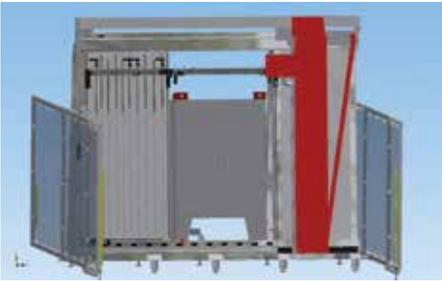

3. Lower the clamping bar and activate the clamps to secure the lifting eye adapter(s) in place.

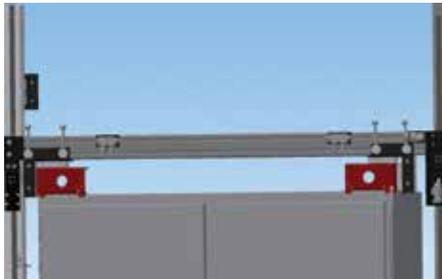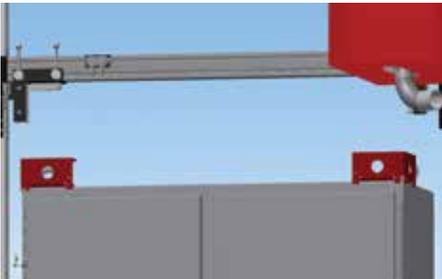

4. After processing, deactivate the clamps and carefully remove the lifting eye adapter(s) before moving the enclosure.

For assistance contact Technical Support at [steinhauersupport@nVent.com](mailto:steinhauersupport@nVent.com)



[nVent.com](http://nVent.com)

Our powerful portfolio of brands:

**CADDY ERICO HOFFMAN RAYCHEM SCHROFF TRACER**

©2019 NVENT. ALL NVENT MARKS AND LOGOS ARE OWNED OR LICENSED BY NVENT SERVICES GMBH OR ITS AFFILIATES. ALL OTHER TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.

NVENT RESERVES THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE.

HOFFMAN-FLY-USER00021-MODCENTERLIFTING-EN-1908